


JUMPER SETTINGS:

Decay

J1	J2	
ON	ON	20%
	ON	40%
ON		60%
		80%

Microstepping mode

J3	J4	J5	
ON	ON	ON	half
	ON	ON	8th
ON		ON	10th
		ON	16th
ON	ON		20th
	ON		32nd
ON			40th
			64th

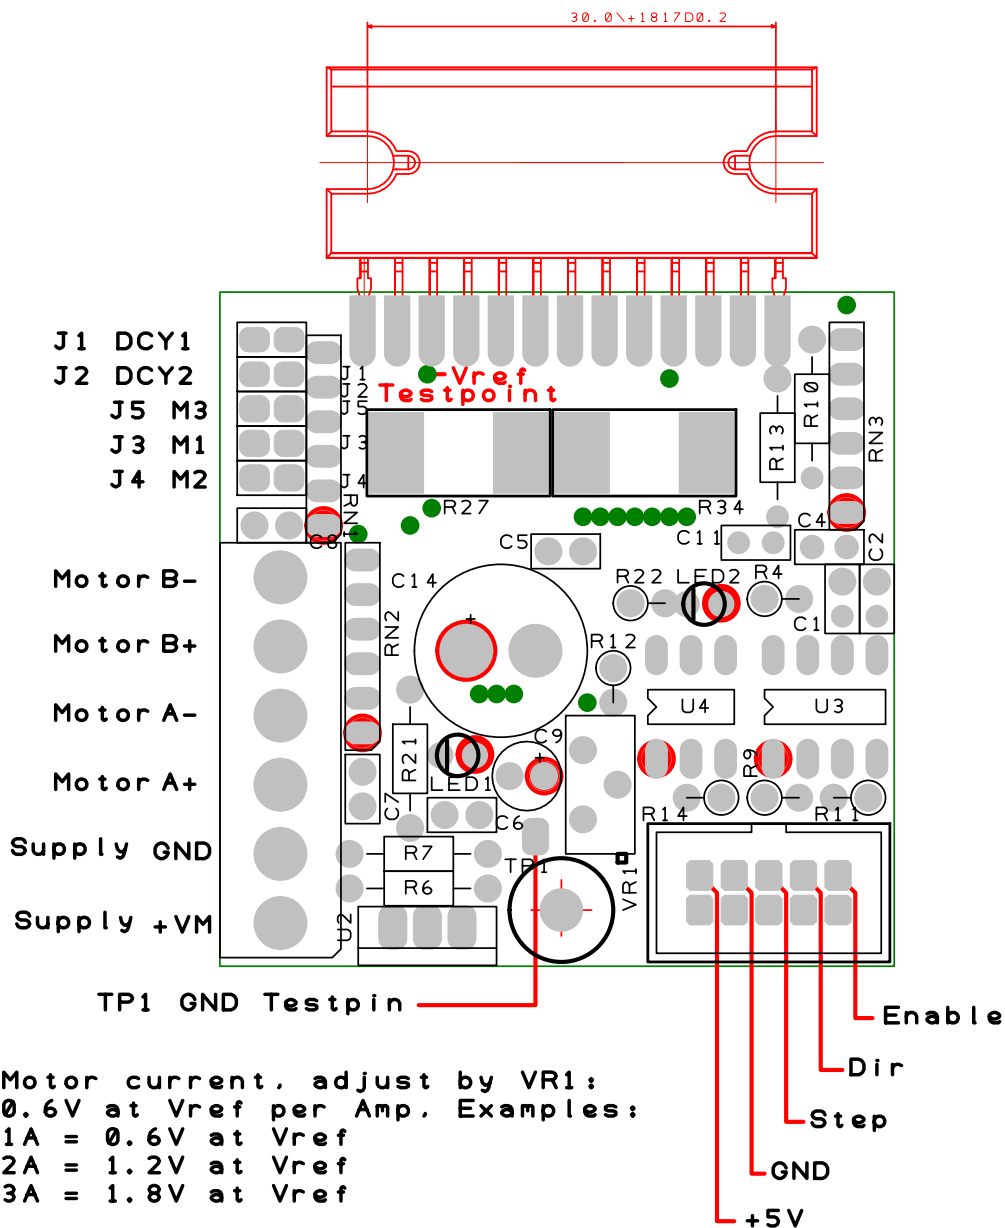

THB6064AH special (flat) version

Component direction, connection, testpins, jumper settings, motor current adjustment.