

Table of Contents

Chapter 1

Introduction

How to Use This Manual	1-1
Manual Organization.	1-1
Manual Terms and Conventions	1-6
Using the Examples.	1-6
Differences Between the PCL 4 and PCL 5 Printers . .	1-7
Additional LaserJet 4 Features.	1-10

Chapter 2

Setting Up A Print Job

Introduction	2-1
Printer Job Language (PJM)	2-1
Brief Overview of the LaserJet Print File Structure . .	2-3
The Print Environment	2-7
Overview.	2-7
Changing the Print Environment.	2-9
Reverting to Environment Default Values	2-11
LaserJet Job Setup.	2-13
Making Copies of the Job.	2-30
LaserJet IIISi Job Setup Commands	2-31
Memory Usage	2-33
Chapter Summary	2-37

Chapter 3

Page Setup

Introduction	3-1
Selecting a Paper Source	3-1
Selecting a Physical Page Size	3-2
The Actual Printable Area	3-4
Changing Orientation	3-9
Print Direction	3-11
Managing the Text Area	3-13
Controlling Top Margin	3-15
Establishing the Bottom Margin	3-16
Perforation Skip for Print-and-Space Formatting	3-17
Controlling the Left Margin	3-19
Controlling Right Margin	3-20
Changing Character Spacing (HMI)	3-21
Modifying Line Spacing (VMI)	3-22

Chapter 4

Cursor Positioning

Introduction	4-1
Current Active Position (CAP)	4-1
Print-and-Space Cursor Positioning	4-5
Absolute vs. Relative Positioning	4-6
Units of Movement	4-7
Saving the Cursor Position	4-10
Positioning the Cursor at the Limits of the Page	4-11
How the Paper Path Affects Cursor Placement	4-16

Chapter 5

Using Fonts

Introduction	5-1
Selecting Fonts	5-2
General Font Management	5-9
Working With Fonts	5-14
Justifying Text When Using Proportional Fonts .	5-14
Adjusting Line Spacing for Point Size	5-17
Transparent Print Data and Special Characters .	5-18
Underlining Characters	5-19
Font Headers	5-20

Chapter 6

AutoFont Support

Introduction	6-1
TFM File Structure	6-2
TFM Tag Descriptions	6-11
Font Identification	6-12
Font Parameters	6-23
Character Parameters	6-27
Kerning Information	6-29
Device Data	6-35
PANOSE Numbers	6-36
“Glue” File Description and Usage	6-37
File Format	6-37
Font Entries	6-38
Supported Fonts	6-47
Comparing Past Font Support With TFM Support ..	6-49

AutoFont Support	6-52
Hard-coding TFM Data.....	6-52
TFM Reader Integration.....	6-53
Available Tools for TFM Reader Integration.....	6-55
The TFM Reader Program	6-56
End-User Considerations	6-57
Using the TFM Reader	6-58
TFM Reader Data Flow	6-59
Modifying the TFM Reader.....	6-61
Accessing the TFM Data Structure	6-62
Supplied TFM Files.....	6-66
File Naming Convention.....	6-67
Sample TFM Implementation	6-68
Selecting Fonts Using TFM Information	6-73
Locating the TFM Files	6-79
The Glue File	6-80
Creating TFM Files	6-81
Available Tools.....	6-82
The TFM Writer	6-82
PANOSE Numbers	6-88
Modifying the TFM Writer	6-88
Compiling the TFM Writer.....	6-100

Chapter 7

Intellifont[®] Integration

Why Integrate Intellifont?.....	7-1
Font File Formats	7-1
Adding Intellifont to Your Application Software	7-5
Screen Fonts.....	7-13

Chapter 8

AutoFont Support For TrueType

Introduction	8-1
TrueType Information for TFM tags	8-1
The Development Environment for the TFM Writer .	8-10
Compiler Version	8-10
Description of Files	8-11
Compiling the TFM Writer	8-12
Generating a TrueType TFM.	8-12

Chapter 9

Raster Graphics

Introduction	9-1
The Raster Graphics System	9-1
Using Raster Graphics	9-3
Raster Compression Modes	9-5
Compression Mode Performance	9-15
End Raster Graphics	9-16
Positioning the Cursor for Raster Graphics	9-17
Merging Text With Raster Graphics	9-17
Auto-Rotation of Raster Images	9-20

Chapter 10

Vector Graphics

Introduction	10-1
Additional LaserJet 4 Features	10-1
The Picture Presentation Directives	10-2
PCL Picture Frame & HP-GL/2 Plot Size	10-3
The Picture Frame Anchor Point	10-4
Basic Steps for Importing an HP-GL/2 Plot	10-4
Basic Steps for Creating an HP-GL/2 Plot	10-5
When to Use Vector Graphics vs. Raster Graphics . . .	10-6
HP-GL/2 & PCL Orientation Interactions	10-7
Vector Graphics Limits	10-9
The Scaling Factor and the Picture Frame	10-10
Memory usage and HP-GL/2	10-12
Using HP-GL/2 Commands	10-13

Chapter 11

The Print Model

The Print Model—Filling With Patterns	11-1
How the Print Model Works	11-3
Using Rectangular Area Fill	11-5
Patterning Other Images	11-7
Using the Print Model Commands	11-7
User-Defined Patterns	11-13

Chapter 12

Using Macros

Introduction	12-1
Creating Macros	12-2
Using Macros	12-2
General Macro Management	12-4
HP-GL/2 in the Macro Environment	12-6
Summary of Rules Concerning Macros	12-6

Chapter 13

Tips for Efficient Programming

Introduction	13-1
General Tips	13-1
Combining Escape Sequences	13-1
Job Setup	13-2
For Non-PJL LaserJet Printers	13-2
For PJL LaserJet Printers	13-2
Page Setup	13-4
General Print Job Initialization	13-5
Non-PJL Example	13-7
LaserJet IIISi Example	13-7
LaserJet 4 Example	13-8
Using Fonts	13-8
Font Support	13-9
Raster Graphics	13-9
The Print Model	13-10
Vector Graphics	13-11
Macros	13-12

Chapter 14

Common Problems & Their Solutions

Introduction	14-1
Missing Characters or Graphics	14-1
Running Out of Memory (Error 20)	14-1
Print Overrun (Error 21)	14-3
Reset (E _c E) Deleting Temporary Fonts and Macros . .	14-3
PJL-Specific Problems	14-3
Reset (E _c E) Causing Printing of Partial Pages	14-4
Clipped Graphic Images	14-4
HP-GL/2 Images Not Printing Properly	14-5

Appendix A

LaserJet Printer Features and Compatibility

Feature Support Table	A-1
LaserJet Compatibility Issues	A-10

Appendix B

Programming Examples

Introduction	B-1
Fonts and Print Direction	B-1
Printing Rules Using the Print Model	B-3
Print Model Font Effects	B-3
HP-GL/2 Font Effects	B-6
HP-GL/2 Graphics	B-9
Raster Graphics Compression	B-10

Appendix C

Integrating Rambo

Introduction	C-1
The Rambo Command Line	C-5
Example Implementation Using Rambo	C-12
Printing the Test Files	C-18

Appendix D

Using the BUILDSYM Utility

Introduction	D-1
The BUILDSYM Kit	D-1
How Does BUILDSYM Work?	D-2
Using BUILDSYM	D-5
Creating a Symbol Set Definition File (.SYM File) ...	D-6

Appendix E

Using the FASST Utility

Overview	E-1
The FASST Kit	E-1
File Formats	E-2
FASST Shell Usage	E-3
FASST Integration	E-5
Major Functions	E-6
Modifying the Code	E-9
Testing Data	E-11

Appendix F**Using the SRTool Utility**

Introduction	F-1
Installing and Running SRTool.....	F-2
Initialization.....	F-2
The User Interface.....	F-5
PCL Status Readback	F-10
PJL Status Readback	F-13
PCL Command Macros	F-14
PJL Command Macros	F-17
Options	F-18

Appendix G**Kerning Information**

Introduction	G-1
Pair Kerning.....	G-2
Sector Kerning.....	G-3
Track Kerning	G-6

Appendix H**HP MSL Character Number Table**

Index