

RS-232 – I²C Adapter/Monitor

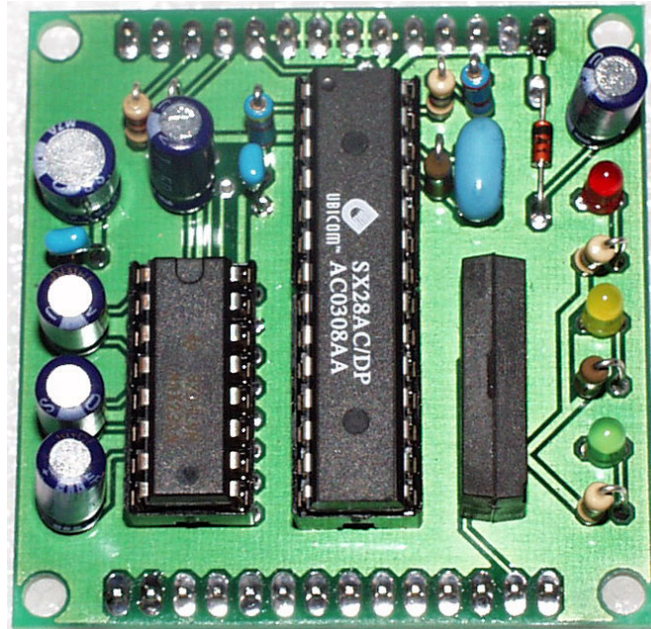

This adapter provides an easy-to use interface between devices on an I²C bus and an RS-232 serial communications port.

The adapter's command set contains various commands to interact with the I²C bus. The so-called "high-level" commands perform the necessary tasks for complete communications with I²C devices transparent to the application controlling the RS-232 side. This means setting the start condition, sending the address and the read/*write bit, sending or reading data bytes reading or setting the acknowledge bit, and finally generating the stop condition is all handled by the adapter.

As the adapter returns results with a leading "O" in case of successful operations, or an "E" in case of errors, data read from an I²C device must be buffered in the adapter's memory before transmitting it via RS-232. This buffer has a size of 16 bytes, i.e. the maximum number of bytes that can be read from an I²C device with a high-level command is limited to 16.

The adapter command set also contains so-called "low-level" commands to interact with the I²C bus. Such commands require a bit more activities on the RS-232 side. On the other hand, they allow for any number of data bytes transferred to or from an I²C device. They are also useful to communicate with I²C devices that expect sequences other than the ones handled by the "high-level" commands.

Besides its major task to translate between RS-232 and I²C, the adapter also accepts commands via RS-232 to set four parallel output lines, to control an on-board reed-relay, and to read eight parallel input lines. The input lines also clock eight internal 16-bit counters which can be read, or reset by designated commands.

For debugging, or test purposes, a "Monitor Mode" can be activated which turns the adapter into an I²C "spy". In this mode, activities on the monitored I²C bus are transmitted via the RS-232 interface.

The adapter makes use of an SX28 micro controller. Therefore, by modifying the controller software, it can easily be adapted to special customer needs.

Electrical Specifications

Supply voltage:	5 V stabilized, approx. 100 mA (3.3 V versions available on demand).
Maximum voltage on all pins:	7 V
Parallel inputs:	TTL level with Schmitt-Trigger characteristics, controller-internal pull-up resistors (approx. 10 kOhm) against the positive supply voltage.
Parallel outputs:	TTL-level, maximum current, outputs can sink or source: 30 mA. <i>Note: When switching inductive loads like relays, suppressor diodes are required.</i>
Serial interface:	+/- 12 V, according to the RS-232 specifications. 115.2 kBaud, 8N1, no handshake

Interface to the PC/Pocket-PC

Communication with the PC/Pocket-PC is performed via the TxD and RxD signals of an RX-232 serial port at 112.5 kBaud, 8 bits, no parity, one stop bit. There are no handshake lines required.

I²C Interface

For communication via the I²C bus according to the specifications of Philips, the signals

Serial Data (SDA)
Serial Clock (SCL)

are available. Both signal lines are open collector; on the adapter, both lines are connected to the positive supply voltage via pull-up resistors of 2.2 kΩ each.

Parallel Inputs, Counter Inputs

One 8-bit input port of the controller is available to directly read parallel input data. These inputs are connected to the supply voltage via internal pull-up resistors (approx. ca. 10 kΩ) and have Schmitt-Trigger characteristics.

Each of these eight inputs also control eight internal 16-bit counters. On each positive transition (low → high) on an input line, the associated counter is incremented by one. Commands are available to read and clear one or all of these counters. The inputs are sampled at a rate of about 1 MHz, and don't have any de-bouncing provisions. If necessary, external components must be provided to avoid that "spikes" cause false counter results.

Parallel Outputs

Four output port lines of the controller can be used to directly control external components, bypassing the I²C bus. These outputs can sink or source up to 30 mA each. When the adapter is powered up, or when in idle mode, the outputs are switched to high-impedance with no output voltage. After the first OUTPUT command is received via the RS-232 port, the outputs switch to high, or low level, according to the parameter received with the OUTPUT command.

Reset Input

This input is connected to the positive supply voltage via a pull-up resistor (4.7 kΩ). When this input is pulled low, the adapter stops operation, and enters the idle mode when the input is released again to high level.

This input may be controlled from power supplies that have a power-fail signal available, for example.

Safety Relay Output

The safety relay on the adapter has one isolated make contact (max. 200 VAC, 1A). When the adapter is powered off, or in idle mode, the contact is open. It closes when the adapter receives a PING command, and stays close until the adapter is powered off, reset, or receives a "BREAK", or an "UNPING" command.

General Information About I²C Communications

Via the I²C bus one or more so-called "Masters" communicate with one or more so-called "Slaves". Here, the I²C adapter is supposed to be the only master in the system, and all I²C components connected to the bus must act as slaves, i.e. they react on commands that are sent from the PC/Pocket-PC via the adapter.

When a master wants to establish a communication, it first generates a start condition on the bus (SDA 1→0 while SCL = 1), and then sends an address/mode byte having the following format:

aaaaaaam

where "aaaaaaa" is the 7-bit address of the slave, and "m" indicates a read or write operation (m = 0: write, m = 1: read). After having received this byte, the addressed slave pulls low the SDA line to acknowledge, and the master checks if the slave has acknowledged. If this is not the case, there is an error (slave not ready, not existing, or some other fault).

When the master has initiated a write operation, it sends one or more data bytes following the address/mode byte, where each of these bytes should be acknowledged by the slave. At the end of a transmission, the master generates the stop condition on the bus (SDA 0→1 while SCL = 1).

When the master has initiated a read operation, it receives one or more bytes from the slave, and sends an acknowledge for each of these bytes except the last one. By not sending an acknowledge for the last byte, the master indicates to the slave that it shall not send more bytes. Finally, the master generates the stop condition on the bus (SDA 0→1 while SCL = 1).

Further options of the I²C protocol, like clock-stretching, 10-bit addresses, multi-master mode, or handling of bus arbitrations are not required here, and are not supported.

IMPORTANT NOTE: The commands that communicate with I²C components expect a 7-bit address, i.e. the most significant bit must always be 0. This address value is automatically shifted one bit position to the left, and the lowest bit will be set on read, or cleared on write commands.

Purpose of the RS-232 – I²C Adapter

Besides converting the electrical levels, i.e. from ±12 V to 0/+5 V for the TxD and RxD RS-232 signals, the major task of the adapter is to make the communication with components on the I²C bus as transparent as possible to the application running on the PC/Pocket-PC. This application can communicate with the adapter by using simple command sequences, that could be generated by a Visual BASIC application, for example.

The application sends a command character (plus some more characters, depending on the command) to the adapter. Commands that address the adapter itself are immediately acknowledged, where I²C commands issue the adapter to start a communication via the I²C bus. When this communication is completed, the adapter first returns a status character ("O", or "E") which indicates if the operation was successful or not.

In case the operation was successful, the adapter returns one or more result bytes. In case of an error, the adapter returns just the error code "E".

Idle Mode

When the adapter is powered up, has received a BREAK command, after a time-out or a reset, the adapter enters the idle mode, i.e. the I²C bus is held in idle condition (SDA and SCL on high level), and no communication is performed via the I²C bus. All commands received via RS-232 are answered with "S" (except the INIT command), the safety relay is in-active, and the status LED blinks fast.

To terminate the idle mode, an INIT command must be sent. This command sets some adapter parameters. After an INIT command has been received, the adapter accepts other commands via the RS-232 interface, and the status LED blinks slowly, but the safety relay still remains in-active. The safety relay will only be activated after the adapter has received a PING command. When this is the case, the status LED stops blinking, and remains on.

This makes it possible to first initialize the adapter, then initialize components on the I²C bus before finally beginning operation of the controlled system by activating the safety relay which might turn on another supply voltage, for example.

It is also possible to turn the adapter from idle directly into the monitor mode (see the MONITOR command).

Time-Out

The INIT command allows the definition of a time-out value. When the specified time-out interval has elapsed before the adapter has received a new valid command via RS-232, it will enter the idle mode, i.e. turn off the safety relay, and no more I²C communications are performed.

The PC/Pocket-PC application on the other hand, should also perform a time-out check. When it does not receive acknowledges from the adapter in a certain time interval, it should send a BREAK, followed by a new INIT command, and eventually a PING command to activate the safety relay.

Adapter Commands

This section describes the available adapter commands, where the following syntax is used:

<Character(s)> → = Character(s) that are sent to the adapter
→ <Character(s)> = Character(s) that are returned from the adapter

When alternative values are possible, the "|" is used to separate them.

When a letter, a figure, or a special symbol is specified as <Character>, it will be transmitted or received as ASCII character (IMPORTANT: Upper- and lower case is significant). When an expression like CHR(nnn) is specified instead, the binary, or ASCII code nnn will be sent or received instead. "CR" means that the Return character code (13) must be sent.

COUNTER READ

Sequence: C + CHR(<n>) →
→ O + CHR(<h>) + CHR(<l>) | E

Allowed values for <n>: 0...7 (or 0...3 for adapters with four inputs and eight outputs)

Function: Reads the contents of the counter that is assigned to the input specified by <n> (0...7 or 0...3).

Returns: O = Read successful, <h> is the high counter byte, and <l> is the low counter byte.
E = Value <n> out of range.

This command reads the current contents of the 16-bit counter associated to input <n>.

COUNTER READ ALL

Sequence: A →
→ O + CHR(<h₇>) + CHR(<l₇>) + CHR(<h₆>) + CHR(<l₆>) +
CHR(<h₅>) + CHR(<l₅>) + CHR(<h₄>) + CHR(<l₄>) +
CHR(<h₃>) + CHR(<l₃>) + CHR(<h₂>) + CHR(<l₂>) +
CHR(<h₁>) + CHR(<l₁>) + CHR(<h₀>) + CHR(<l₀>)

or for adapters with four inputs and eight outputs:

→ O + CHR(<h₃>) + CHR(<l₃>) + CHR(<h₂>) + CHR(<l₂>) +
CHR(<h₁>) + CHR(<l₁>) + CHR(<h₀>) + CHR(<l₀>)

Function: Reads the contents of all counters.

Returns: O = Success, the subsequent sixteen (or eight) bytes contain the current counter values, starting with the counter for input 7 (or 3) down to input 0; each value in high- low byte order.

INIT

Sequence: I + <c> + CHR(<to>) + CR →
→ O + <hh> | E

<c> = I²C bit rate kBit/s
<to> = Timeout period
<hh> = Adapter Version-Id (3 ASCII characters)
hh = Major version
l = Minor version

e.g.: 031 = Version 3.1

Allowed values for <c>:
0 = 25 kBit/s
1 = 50 kBit/s
2 = 100 kBit/s

Allowed values for <to>: 0...255 For <to> = 0, no timeout checking is performed, otherwise, <to> defines the time interval in steps of 100 ms, i.e. time intervals between 100 ms, and 25.5 s may be selected.

Function: Initializes the adapter, and terminates the idle mode, i.e. communication via the I²C bus is enabled. Note that the safety relay will not be activated yet – only a subsequent PING command will activate it.

When the adapter does not receive new commands via RS-232 within the period defined with the <to> parameter, the adapter will reactivate the idle mode again, so another INIT command is necessary to restart it again.

Returns: O + <hh> = Successful initialization, <hh> contains the adapter version number, e.g. "031" means version 3.1
E = Error – an illegal number of parameters was sent.

Note: Adapters with four inputs and eight outputs return the version number with a leading "1" instead of a "0", e.g. "131".

INPUT

Sequence: N →
→ O + CHR(<val>)

Function: Reads the eight (or four) input port lines, and returns the result pattern in <val> (0...255 or 0...63).

Returns: O + chr(<val>)

MONITOR

Sequence: M →
→ CHR<byte> + A|N + { CHR<byte> + A|N + ... }

Function: This command activates the adapter's monitor mode. In this mode, the safety relay is deactivated, and all outputs are set to high impedance. The green status LED is turned off, and the yellow I²C activity LED is turned on.

The adapter then monitors the I²C bus. Whenever it detects an activity on the bus, it returns the byte sent over the bus, followed by an "A" when it has detected an acknowledge, or an "N", when no acknowledge was detected.

In order to terminate the monitor mode, a BREAK command must be issued.

Note: The adapter internally makes use of a 32 byte FIFO buffer for the bytes and acknowledge states. This makes it possible to monitor bus systems using a data rate of up to 100 kb/s, provided that there is no continuous communication on the bus. When the FIFO buffer gets full before characters could be sent to the PC, bus activities will get lost.

To enter the monitor mode, it is not necessary to initialize the adapter before issuing the MONITOR command.

OUTPUT

Sequence: O + chr(<val>) →
→ O

Function: Sets the four (or eight) output port bits according to the pattern in <val> (0...255 - the upper four bits of <val> are ignored by adapters with four outputs). In idle mode, the output lines are disconnected (high impedance). After the first OUTPUT command they are activated and set to the specified states.

Returns: O

PING

Sequence: P →
→ O

Function: Used to check if the adapter is available, and operational. When this is the case, an "O" is returned for acknowledge, otherwise, no answer is sent (the PC application should implement a timeout to handle this situation).

In addition, this command also activates the safety relay, and the status LED will stop blinking and it remains permanently on. The safety relay remains activated until the adapter enters the idle mode again due to a timeout, a reset, or a BREAK command.

Returns: O

READ BYTE WITH ACK

Sequence: E →
→ CHR(<byte>)

Function: This "low-level" I²C-command reads a byte (<byte>, 0...255) from the I²C device which was previously addressed for read, and then sets the acknowledge condition.

In order to receive meaningful data with this command, it is necessary to first address a bus device for read (see SEND READ ADDRESS). Without addressing a valid I²C device first, this command will always return CHR(255), or 0xFF.

You may then issue any number of subsequent READ BYTE WITH ACK commands, e.g. to read out sequential data from an EEPROM. Often, the sequential read must be terminated with a read followed by no acknowledge (see READ BYTE WITHOUT ACK).

Returns: <byte>

READ BYTE WITHOUT ACK

Sequence: e →
→ CHR(<byte>)

Function: This "low-level" I²C command reads a byte (<byte>, 0...255) from the I²C device which was previously addressed for read, and then clears the acknowledge condition.

In order to receive meaningful data with this command, it is necessary to first address a bus device for read (see SEND READ ADDRESS). Without addressing a valid I²C device first, this command will always return CHR(255), or 0xFF.

Usually, I²C devices, like EEPROMS can be sequentially read by reading single bytes followed by an acknowledge (use READ BYTE WITH ACK). In order to terminate the sequential read, the last read must not be followed by an acknowledge, i.e. use this READ BYTE WITH NACK command for this purpose.

Returns: <byte>

RX1

Sequence: R + CHR(<addr>) →
→ O + CHR(<val>) | E

Function: This "high-level" command issues a start condition, sends the 7-bit address <addr> (0...127) with the R/W-bit set, then reads a byte (<val>, 0...255) from the I²C device, sets the acknowledge bit (for no Ack), and finally issues a stop condition.

Returns: O = Read successful, byte read follows
E = Error (no acknowledge from the device, or <addr> > 127)

Note: This is a special version of the RXN command. No length parameter is required here, i.e. the communication is slightly faster here.

RXN

Sequence: r + CHR(<addr>) + CHR(<n>) →
→ O + CHR(<val1>) {+ CHR(<val2>) + ...} | E

Function: This "high-level" command issues a start condition, sends the 7-bit address <addr> (0...127) with the R/W-bit set, then reads <n> bytes (<valx>, 0...255) from the I²C device with the acknowledge bits cleared, and finally issues a stop condition.

Returns: O = Read successful, bytes read follow.
E = Error (no acknowledge from the device, <n> > 16, or <addr> > 127).

SEND BYTE

Sequence: B + CHR(<Byte>) →
→ O | E

Function: This “low-level” command sends a byte via the I²C bus. Before issuing this command, it is necessary to send an address (see SEND ADDRESS) to select the I²C device which shall receive the byte. You may issue any number of subsequent SEND BYTE commands, e.g. to write a block of data into an EEPROM.

Returns: O = The bus device has acknowledged.
E = The bus device has not acknowledged.

SEND READ ADDRESS WITH START

Sequence: D + CHR(<addr>) →
→ O | E

Function: This “low-level” command issues the start condition on the bus, and then sends an address for read. Note that <addr> must be a value between 0 and 127. This value is automatically shifted left one bit position, and the least significant bit (the r/w bit) is set.

Returns: O = The bus device has acknowledged.
E = The bus device has not acknowledged.

SEND READ ADDRESS WITHOUT START

Sequence: d + CHR(<addr>) →
→ O | E

Function: This “low-level” command sends an address for read without previously setting the start condition on the bus. Note that <addr> must be a value between 0 and 127. This value is automatically shifted left one bit position, and the least significant bit (the r/w bit) is set.

Some I²C devices first expect a start condition, followed by a write address, a configuration byte, and then another address for reads. You can combine the SEND WRITE ADDRESS WITH START, SEND BYTE, and this SEND READ ADDRESS WITHOUT START commands for that purpose. Usually one or more READ BYTE commands will follow next, in order to read data from the I²C device.

Returns: O = The bus device has acknowledged.
E = The bus device has not acknowledged.

SEND WRITE ADDRESS WITH START

Sequence: W + CHR(<addr>) →
→ O | E

Function: This "low-level" command issues the start condition on the bus, and then sends the specified address for write. Note that <addr> must be a value between 0 and 127. This value is automatically shifted left one bit position, and the least significant bit (the r/w bit) is cleared.

Returns: O = The bus device has acknowledged.
E = The bus device has not acknowledged.

SEND WRITE ADDRESS WITHOUT START

Sequence: w + CHR(<addr>) →
→ O | E

Function: This "low-level" command sends the specified address for write without setting the start condition prior to sending the address. Note that <addr> must be a value between 0 and 127. This value is automatically shifted left one bit position, and the least significant bit (the r/w bit) is cleared.

Returns: O = The bus device has acknowledged.
E = The bus device has not acknowledged.

STOP

Sequence: S →
→ O

Function: Sets the stop condition on the I²C bus. This is a "low-level" utility function that might be called after an error was detected in order to reset the slave components connected to the bus.

Returns: O

TX1

Sequence: T + CHR(<addr>) + CHR(<val>) →
→ O | E

Function: This “high-level” command sets the start condition, sends the 7-bit address <addr> (0...127) with the r/w-bit cleared, then sends the byte <val> (0...255), reads the acknowledge, and finally generates the stop condition.

Returns: O = Success
E = Error (no acknowledge from the I²C device, or <addr> > 127).

Note: This is a special version of the TXN command. No length parameter is required here, so the communication is slightly faster here.

TXN

Sequence: t + CHR(<addr>) + CHR(<n>) + CHR(<val1>) {+ CHR(<val2>) + ...} →
→ O | E

Function: This “high-level” command sets the start condition, sends the 7-bit address <addr> (0...127) with the r/w-bit cleared, then sends <n> bytes <valx> (0...255), reads the acknowledge bits, and finally generates the stop condition.

Returns: O = Success
E = Error (no acknowledge from the I²C device, or <addr> > 127).

UN-PING

Sequenz: p →
→ O

Function: Used to check if the adapter is available, and operational. When this is the case, an “O” is returned for acknowledge, otherwise, no answer is sent (the PC application should implement a timeout to handle this situation).

In addition, this command also de-activates the safety relay, and the status LED will begin blinking slowly. The safety relay remains de-activated until the adapter receives another PING command again.

Returns: O

Bad Commands

Sequence: <?> →
→ ?

Function: When commands are sent to the adapter that are not specified, “?” will be returned as the answer.


Adapter Command Summary

Id	Function
none	BREAK – Force an adapter reset
a	CLEAR ALL COUNTERS – Clears all counter
A	COUNTER READ ALL – Reads all counters
B	SEND BYTE – Send a byte via the bus, and return acknowledge
c	CLEAR COUNTER – Clear a counter
C	COUNTER READ – Read a counter
d	SEND ADDRESS FOR READ WITHOUT START – Sends an address for read without setting the start condition
D	SEND ADDRESS FOR READ WITH START – Sets the start condition, and sends an address for read
e	READ BYTE WITHOUT ACK – Reads a byte, and does not acknowledge
E	READ BYTE WITH ACK – Reads a byte, and sets acknowledge
I	INIT – Initialize the adapter
M	MONITOR – Enter the monitor mode
N	INPUT – Read the adapter input port
O	OUTPUT – Set the adapter output port
p	UN-PING - Check if adapter is ready, de-activate the safety relay
P	PING – Check if adapter is ready, activate the safety relay
r	RXN – Receive one or more bytes via I ² C
R	RX1 – Receive a byte via I ² C
S	STOP – Set the stop condition on the I ² C bus
t	TXN – Send one or more bytes via I ² C
T	TX1 – Send a byte via I ² C
w	SEND WRITE ADDRESS WITHOUT START – Sends an address for write without setting the start condition
W	SEND WRITE ADDRESS WITH START – Sets the start condition, and sends an address for write

Note: Grayed = “low-level” functions.

Adapter Pin Connections

The adapter signals are available on to 14-pin headers (1/10" spacing). The upper pin header has the second pin from the right removed. This position should be closed in the socket to protect the adapter from being inserted the wrong direction.

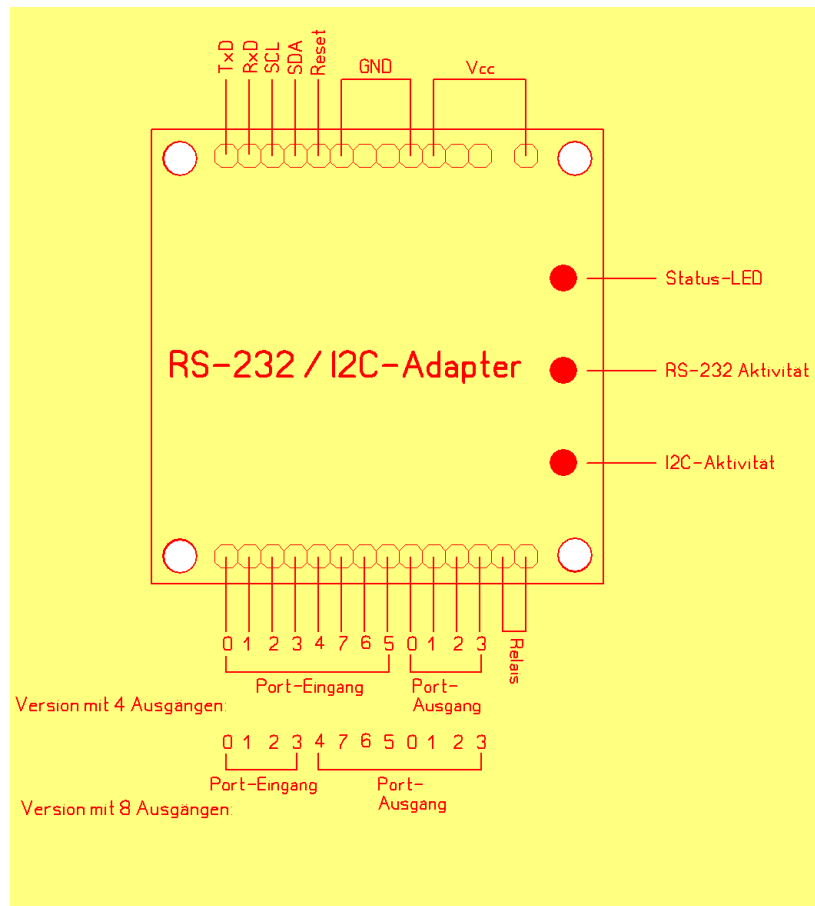

Version mit 4 Ausgängen = Versions with 4 outputs

Version mit 8 Ausgängen = Versions with 8 outputs

LEDs:

Status-LED: fast blinking = idle mode
 slow blinking = operational, safety relay not activated
 steady = operational, safety relay activated
 off = monitor mode

RS-232-Aktivität: blinks when data is received or sent via RS-232

I2C-Aktivität: blinks when data is received or sent via I²C, steady = monitor mode

Port-Eingang = input port

Port-Ausgang = output port

Relais = safety relay contacts

Test Program for the Adapter

The adapter is shipped with a CD-ROM that contains a test application that allows to test the adapter with a PC. The program was developed in Microsoft Visual Basic. The source and project files are also distributed with the CD-ROM. You may use them as hints for your own applications.

When the program is launched, the following window will open:



Provided that the adapter has power supply (the green LED is blinking fast), and that the serial port is connected to one of the PC's COM ports (COM1, or COM2), you may execute the following operations:

Selecting a COM-Port:

Click the radio button in the "Port" section to select the COM port that shall be used for communications.

The buttons described next send various commands to the adapter. The line "Command" shows the characters sent (values enclosed by <> are in hexadecimal). The "Result" line displays the answers being sent by the adapter.

INIT

This sends an INIT command. If necessary, you may change the defaults I²C-Clock, or Timeout before sending the INIT. Setting "Timeout" to some other value but 0 means that you will have to send commands repeatedly. Otherwise, the adapter would perform a reset after the timeout has elapsed.

After clicking INIT, the green LED should blink slowly, indicating that the initialization was accepted, and the "Result" line should display "Onnn", where "nnn" is the adapter's version number. This has terminated the adapter's idle mode.

Following the initialization, other commands may be sent to the adapter, but it makes sense to send a PING command first.

PING

This command is used to test if the adapter is ready, and it also activates the safety relay. The relay contact may be used, for example, to turn on the supply voltage of other components after a successful initialization.

UN-PING

Like the PING command, this command may be used to test if the adapter is ready, but it de-activates the safety relay instead.

BREAK

This button sends a BREAK command to the adapter. Another INIT command is required to activate it again, possibly followed by a PING command.

Sending, and Receiving I²C-Data

Before sending, or receiving I²C data, the address of an I²C component connected to the bus must be entered in the "I²C Address" field. Please enter the address in hexadecimal as 7-bit value (i.e. bit 7 is always clear). The adapter will automatically shift the address bits to the left by one position, and add the read/write bit at the LSB position.

When the adapter could successfully communicate with an I²C component, the first character returned is an "O". When an error has occurred, an "E" will be returned instead.

Errors will occur when the adapter does not receive an acknowledge from the addressed device. Reasons may be that a bad address has been specified, or that the I²C bus may be broken, or that the addressed component is defective, or does not exist.

RX1

This button sends a read command for a single data byte to the I²C device with the address specified in the address field. On successful communication, the "Result" field will contain the sequence "O <xx>", where <xx> stands for the value read in hexadecimal notation.

RXN

This button sends a read command for one or more bytes to the I²C device with the address specified in the "Address" field. Before clicking this button, enter the number of bytes to be received in the "Byte count" field. In case the device answers, the "Result" field will display "O <xx> <xx>..." where <xx> contain the bytes read in hexadecimal.

TX1

This button sends a write command for one data byte to the I²C device with the address specified in the "Address" field. When the device acknowledges, the "Result" field will display "O", else it will display "E". Before clicking this button, enter a hexadecimal value in the "Bytes" field without any specific characters, e.g. "1d", but not 0x1d, or <1d>. When the "Bytes" field contains more than one hexadecimal value, e.g. "1d 2a ff aa", the leftmost one (1d) will be sent.

TXN

This button sends a write command for one or more data bytes to the I²C device with the address specified in the "Address" field. When the device acknowledges, the "Result" field will display "O", else it will display "E". Before clicking this button, enter the number of bytes to be transmitted in the "Byte count" field, and enter enough hexadecimal values in the "Bytes" field, each separated with at least one space, without any specific characters, e.g. "1d 2a ff aa", but not "0x1d 0x2a", or "<1d> <2a>". When this field contains more values than were specified in the "Byte count" field, values will be read and sent from left to right from the "Bytes" field until the specified number of bytes has been sent.

Send Bad Command

This button is used to test the adapter's reaction when it receives an unknown command (it returns an "E" for "Error").

Parallel Input/Output

The adapter has eight parallel inputs, and four parallel outputs, or four parallel inputs, and eight parallel outputs, depending on the version you have ordered.

IN

This button issues an INPUT command to read the status of the adapter's parallel inputs. The Result field displays "O xx" where "xx" is the hexadecimal value representing the current status of the eight (or four) input bits.

OUT

This button issues an OUTPUT command, setting the four (or eight) output lines of the adapter according to the value in the "Bytes" field which must be entered before clicking the "OUT" button. Adapters with four output lines ignore the upper four bits of this value.

Counter Functions

For each input, the adapter maintains a 16-bit counter. Whenever it detects a rising signal edge on one of the inputs, it increments the associated counter. These counters can be read and reset individually, or all together.

The buttons "Clear Counter", "Read Counter", "Clear all Counters" und "Read all Counters" are used for these operations. The number in the "Counter-#" field selects the counter for "Clear Counter" and "Read Counter".

Please note that the counter inputs don't perform any de-bouncing. If necessary, external components are required to perform that task.

"Low-Level" I²C Functions

In order to communicate with special I²C devices which don't match the "macro commands", like TX1, TXn, RX1, and RXn, the adapter provides these "low-level" functions.

Rd.Addr + Start

This button issues a SEND ADDRESS FOR READ WITH START command, i.e. the start condition will be set first, and then the 7-bit address in the "I²C-Address" field together with the r/w-bit set will be sent.

Rd.Addr

This button issues a SEND ADDRESS FOR READ WITHOUT START command, i.e. the 7-bit address in the "I²C-Address" field together with the r/w-bit set will be sent without setting the start condition prior to sending the address.

Wrt.Addr + Start

This button issues a SEND ADDRESS FOR WRITE WITH START command, i.e. the start condition will be set first, and then the 7-bit address in the "I²C-Address" field together with the r/w-bit cleared will be sent.

Wrt.Addr

This button issues a SEND ADDRESS FOR WRITE WITHOUT START command, i.e. the 7-bit address in the "I²C-Address" field together with the r/w-bit set will be sent without setting the start condition prior to sending the address.

Rd.Byte ACK

This button issues a READ BYTE WITH ACK command, i.e. one byte will be read from the bus, and the acknowledge bit will be set low. Please note that it is necessary to issue any SEND READ ADDRESS command in order to select the desired I²C device for reading before using this function. When you continuously receive "ff" as the result, it is most likely that no I²C device has answered.

Rd.Byte NACK

This button issues a READ BYTE WITHOUT ACK command, i.e. one byte will be read from the bus, and the acknowledge bit will left high. Please note that it is necessary to issue any SEND READ ADDRESS command in order to select the desired I²C device for reading before using this function. When you continuously receive "ff" as the result, it is most likely that no I²C device has answered.


I²C devices, like EEPROMs usually allow to sequentially read data, where the sequential read is terminated by sending no acknowledge after the last byte read. This can be accomplished by this function.

Send Byte


This button issues a SEND BYTE command, i.e. the leftmost byte in the "Bytes" field will be sent via the bus. Please note that it is necessary to issue any SEND WRITE ADDRESS command in order to select the desired I²C device for writing before using this function to send a byte. When the I²C device acknowledges the write operation, an "O" will be displayed in the "Result" field, else an "E" will be shown.

Monitor

Clicking this button opens the Monitor window:

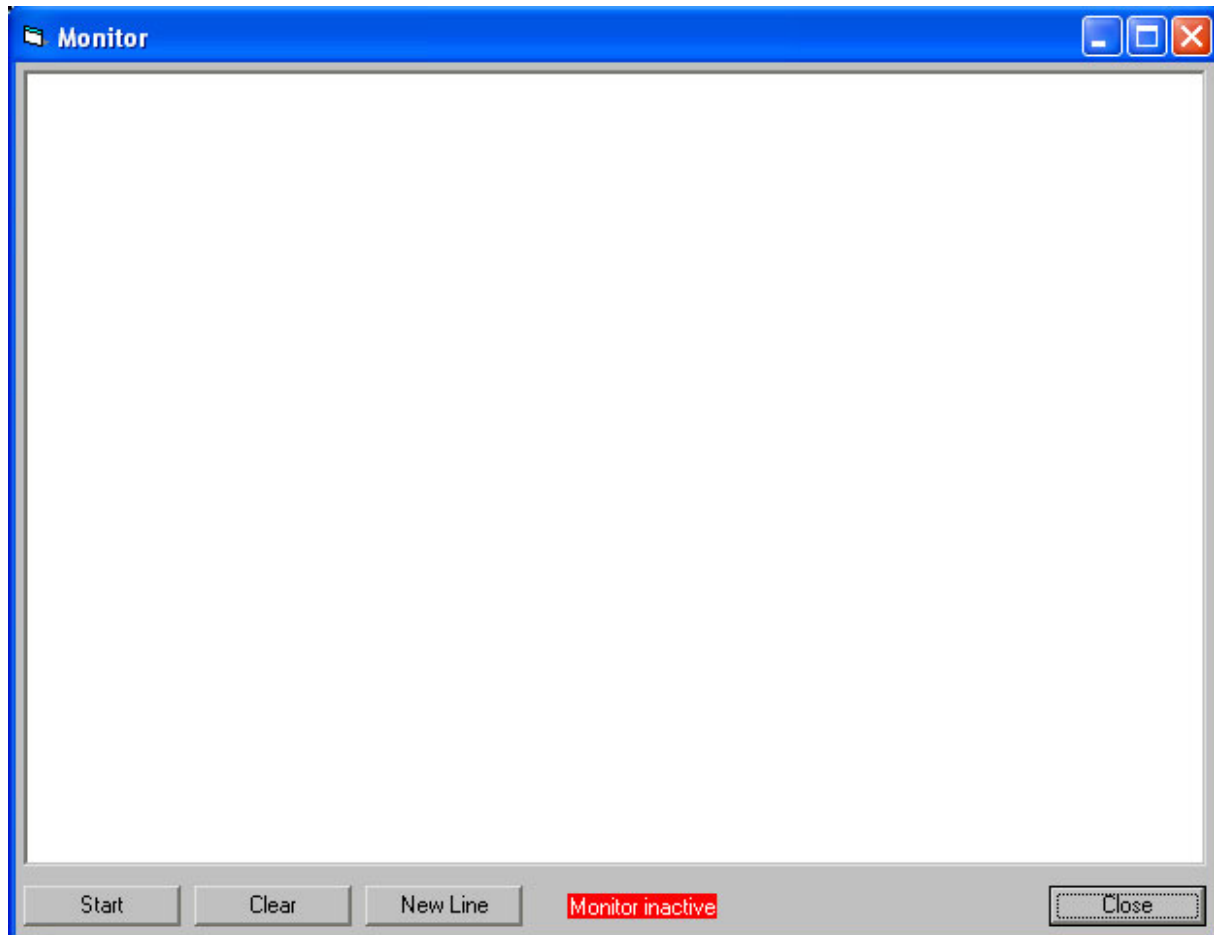

When you click the "Start" button the first time, a MONITOR command will be sent to the adapter which activates its monitor mode. The caption of the "Start" button will change to "Stop" then, and the "Monitor inactive" message changes to "Monitor active".

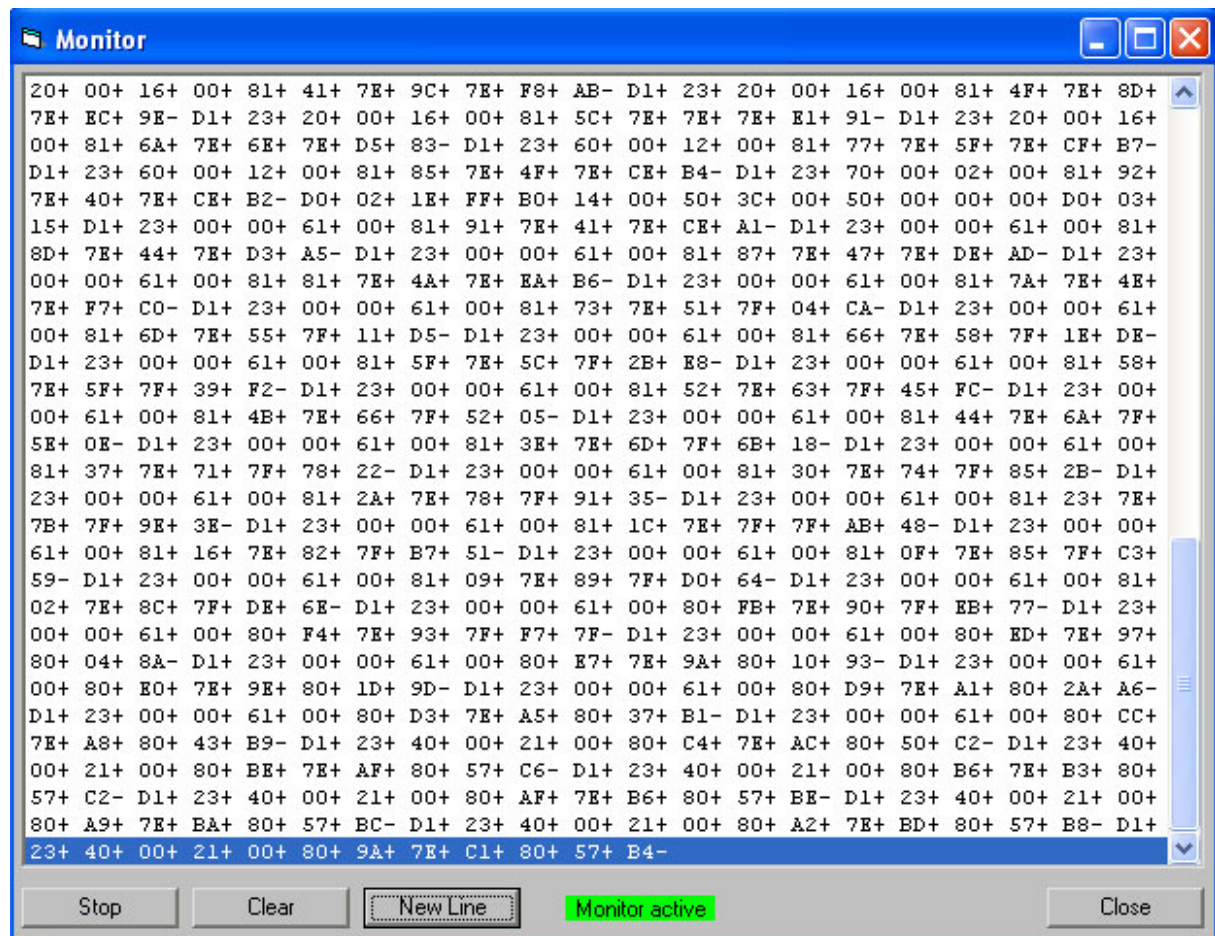

Now, all bytes the adapter “sees” on the I²C bus will be displayed in the list area of the monitor window in a format like this:

```
xx+ xx+ xx- xx-
```

where “xx” stands for the hexadecimal value of the detected byte. The trailing plus indicates that the byte was acknowledged, where a trailing minus indicates that the byte was not acknowledged.

When you click the “Stop” button, the adapter will remain in the monitor mode, and continue receiving characters but they will not be added to the list area until you click the “Start” button again.

You may click the “Clear” button at any time to delete all data displayed in the list area. The “New Line” button inserts a line break at the current position in the list area.


The “New Line” button can be used to insert a line break at the current display position.

When you click the “Close” button, the Monitor window will be closed, and a BREAK command is sent to the adapter in order to terminate the monitor mode.


Final Note:

This document describes the current adapter software which is subject to be changed without prior notice.

I/O Slave

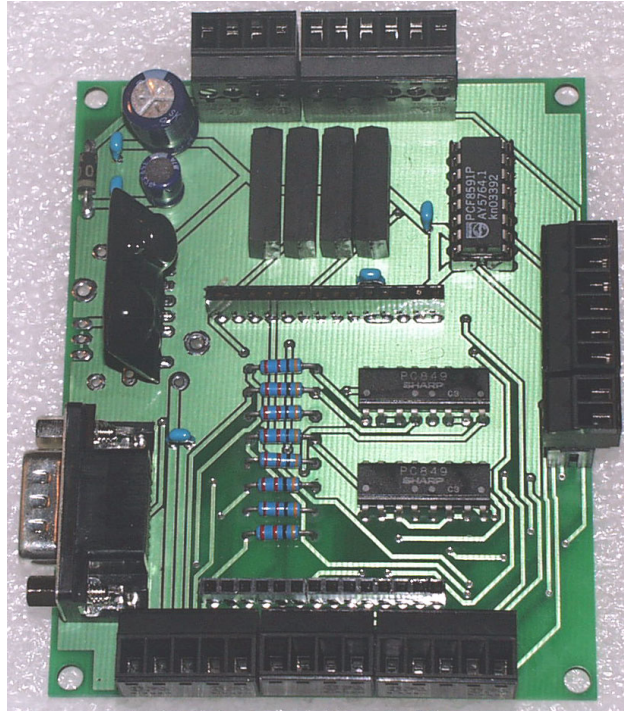

I/O Slave without RS-232/I²C Adapter

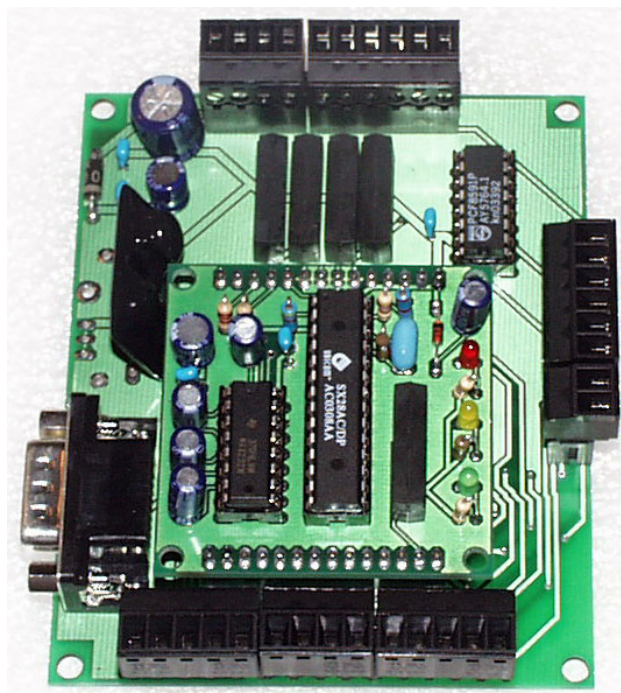

I/O Slave with "piggybacked" RS-232/I²C Adapter

The I/O Slave is used as a platform for the RS-232/I²C Adapter, and to electrically isolate the Adapter's inputs and outputs using photocouplers and relays. Furthermore, the I/O Slave comes with a socket for a Philips PCF 8591 I²C quad 8-bit A/D and single 8-bit D/A converter.

To provide power supply for the components, including the RS-232/I²C Adapter, the board allows several configurations:

Jumper only:	external 5V DC, stabilized
Voltage regulator 7805:	external 8...12V DC, non-stabilized
DC/DC converter 5 V out	external 18...32V DC, non-stabilized

Inputs: 8 photocoupled inputs with integrated current-limiting resistors, and common return.

0 V	=	logical 0
12...24 V	=	logical 1

Four analog inputs, AnIn0... AnIn3, 0...5 V each, 8 bit resolution. The inputs are read via I²C address 0x48 (see the Philips PCF 8591 data sheet for more details).


Outputs: Four reed relays, with both contacts available on separate clamps for each relay, i.e. no common lead. Maximum rating: 200 V AC, 1 A.

One analog output, AnOut, 0...5V, 8 bit resolution. This output is controlled via I²C address 0x48 (see the Philips PCF 8591 data sheet for more details).


Other connections: The contacts of the RS-232/I²C Adapter's safety relay are fed through to two separate clamps.

Dimensions: 100 by 80 mm

Clamps: All connections via plug screw clamps.

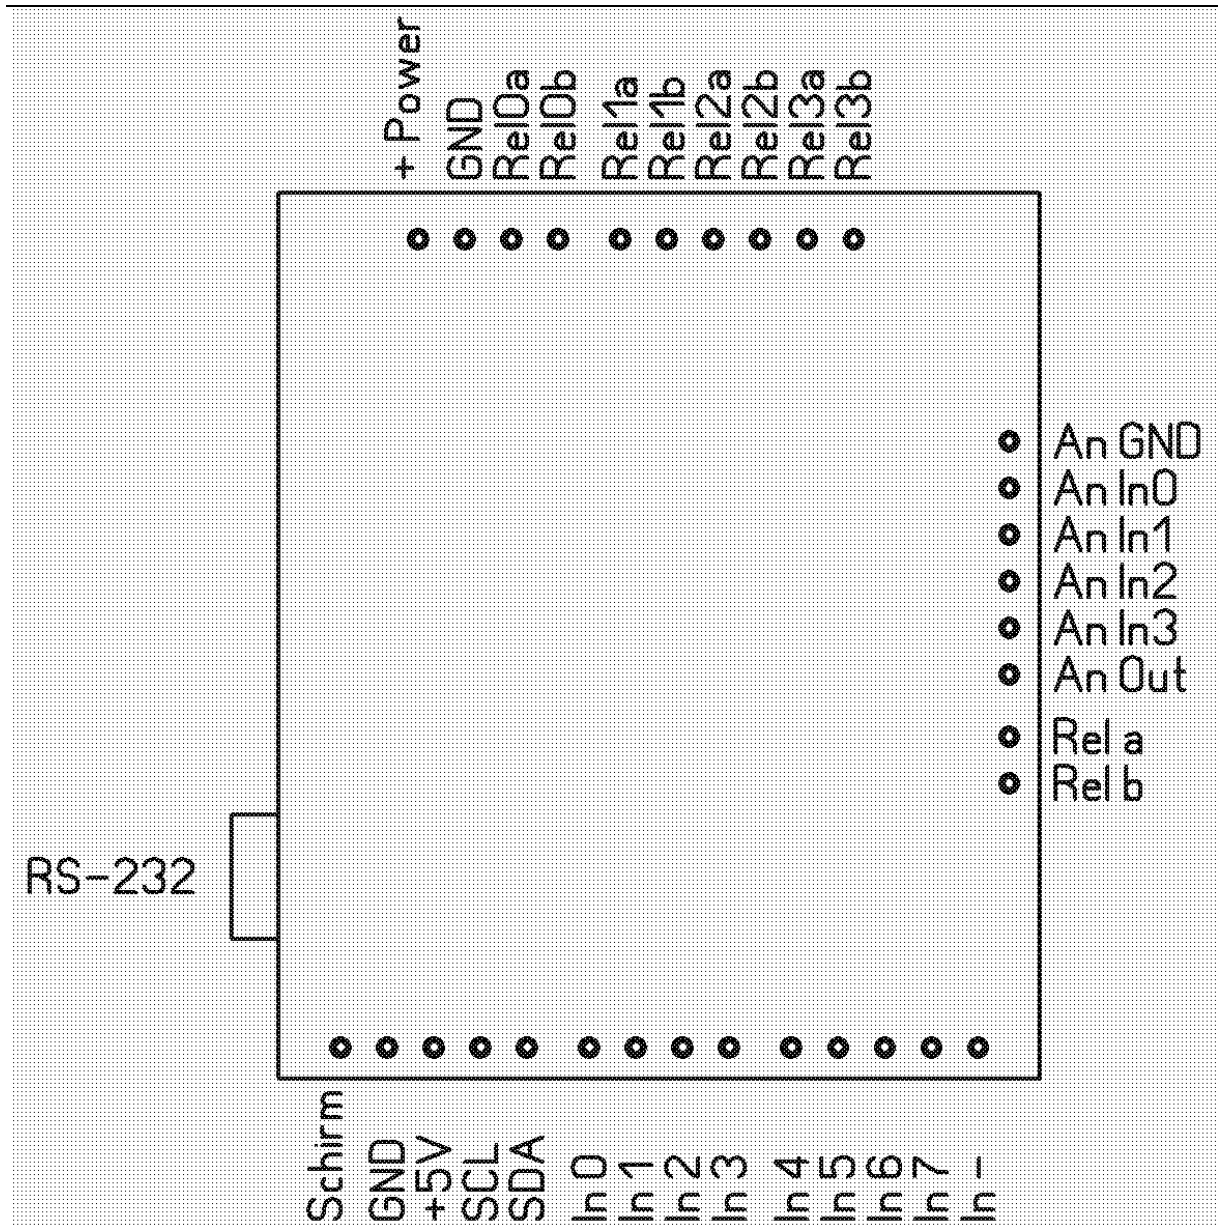

I/O Slave – Connection diagram

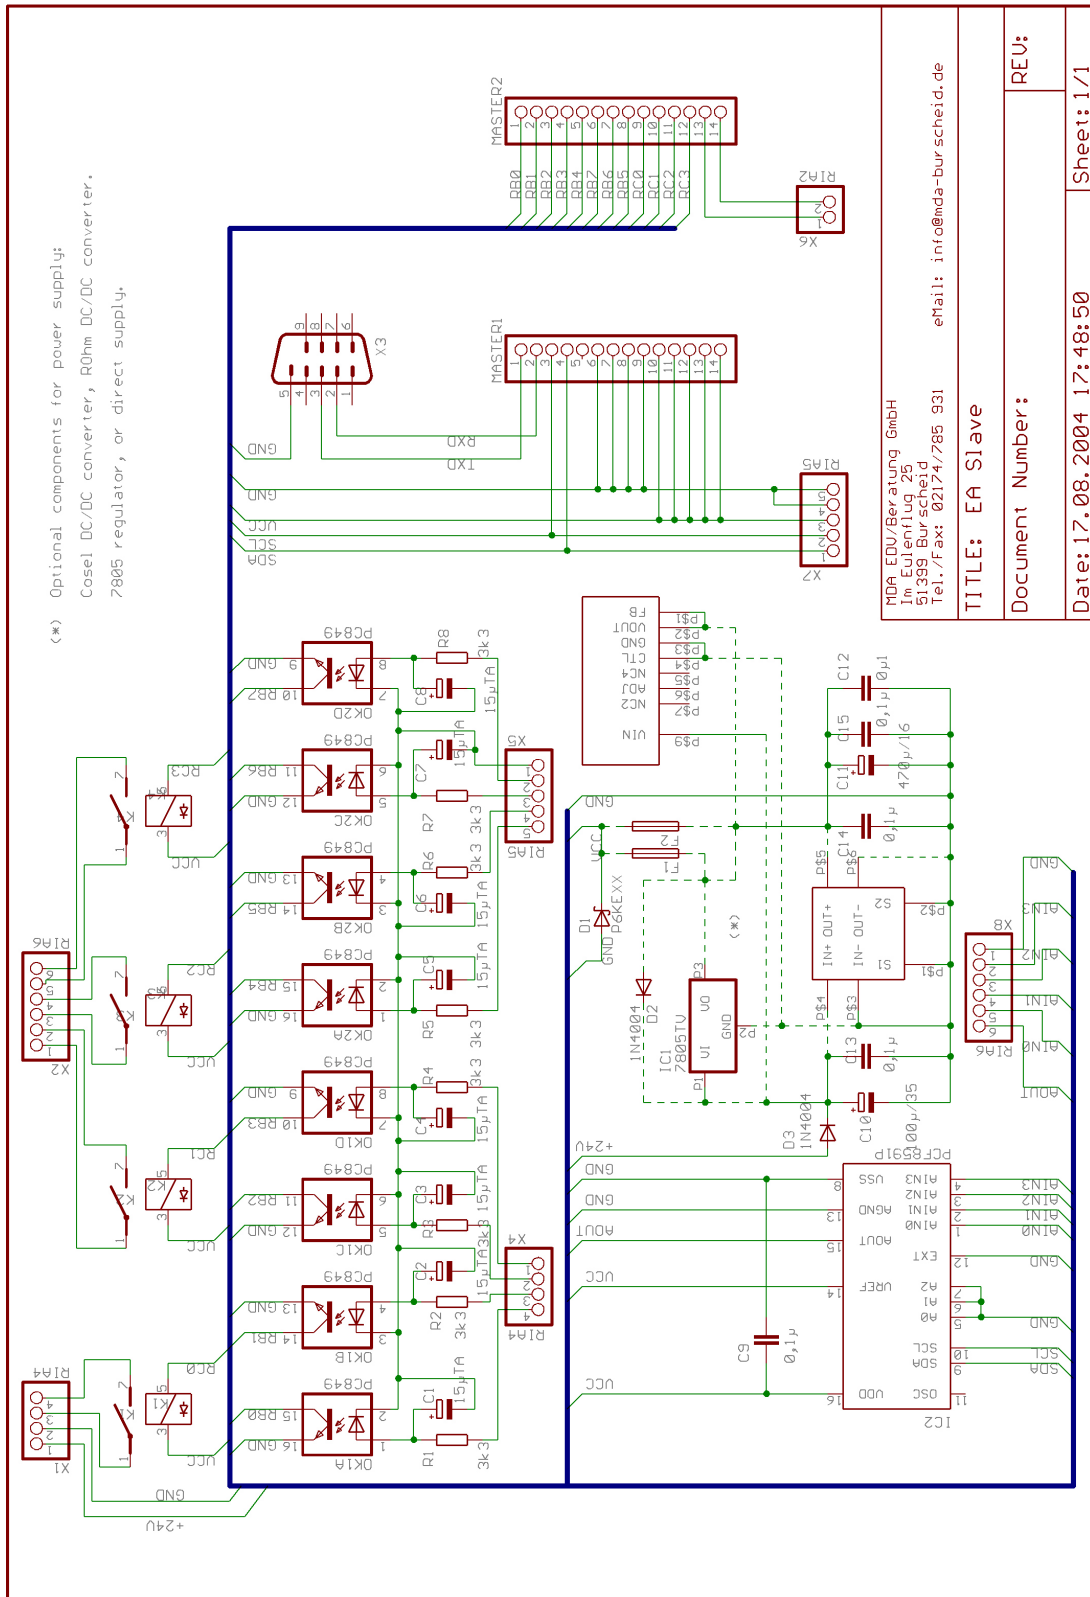

MDA EDV/Beratung GmbH Im Eulenflug 25 51399 Burscheid Tel./Fax: 02174/785 931 eMail: info@mda-burscheid.de	
TITLE: EA Slave	REV:
Document Number:	
Date: 17.08.2004 17:48:50	Sheet: 1/1

I/O Slave – Schematic